




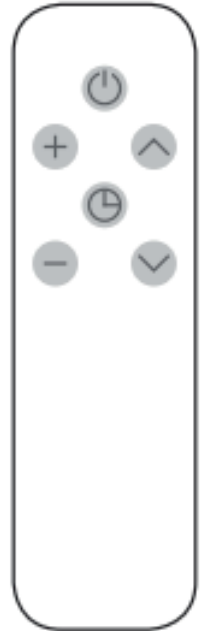


OPERATION FOR BLADE mini / BLADE / BLADE S / CH1200 RT / CH1800 RE

-  Press the button to turn on the heater at high level or change the heat setting.
-  Press the button to turn on the heater at low level or change the heat setting.
-  Press the button to set the required room temperature. The heater will adjust the level when the temperature set has been reached.
-  Press the button repeatedly to cycle through the sleep time options:
1h – 2h – 3h – 4h – 5h – 6h – 7h – 8h – 9h – OFF
Once the sleep time is expired, the unit will be switched off.
During operation, press the button once to check the remaining sleep time.
-  Press the button to turn the heater off.
You can also use the button on the unit to operate the heater.



REPLACING REMOTE CONTROL BATTERIES

Replace all two batteries when the remote control stops operating or its range seems reduced.

Slide the battery compartment cover off.


Symbols inside the compartment show how to match the - and + symbols on the batteries.

Insert the two AAA batteries, making sure to match the - and + symbols.

Slide the cover back on until it clicks into place.

Note: Do not allow water or liquid to get into the remote control

OPERATION

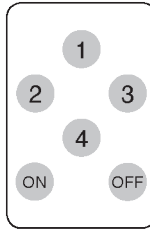

AERO S

Press one of the 1 2 3 4 buttons on the remote control to turn the heater on.

Press ON button to turn on the heater in previous settings.

Press OFF button to turn the heater off.

REPLACING THE BATTERY

Press the battery compartment release button and then slide out the battery tray.

Remove the old battery and put the new battery in, making sure that the battery's positive side is facing up. Use only a CR2025 battery in this remote control.

Slide the battery tray back into the remote control until it clicks.

Note: Do not allow water or liquid to get into the remote control.